



## **Disassembly Instructions For Cleaning SU-16/SU-16UM Glass Rinsers**



**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

# IMPORTANT - PLEASE READ


Dirty glasses should never be rinsed by a glass rinser. Glasses should always be washed, rinsed and sanitized in a glass washing machine or manually in a 3-4 bay sink prior to using the glass rinser. This prevents the spread germs and/or viruses and prevents debris from collecting/clogging the glass rinser pan or drain.

## Disassembling The SU-16/SU-16UM Glass Rinser



### STEP 1:

Remove the outer grate:  
Using a small screwdriver, gently pry out the outer grate. Do not force to prevent bending of the grate (**Figure 1**).

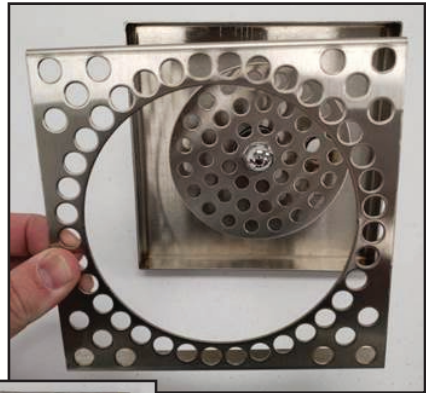

(Figure 1)

### STEP 2:

Remove the inner grate:  
Place a small screwdriver through a hole in the grate, into the drain hole of the rinser to hold the grate in place and prevent it from spinning (**Figure 2**).



(Figure 2)

### STEP 3:

While holding the screwdriver in position, use a 18 mm or 3/4" adjustable wrench to turn the spray head counter-clockwise to loosen and remove (**Figure 3**).



(Figure 3)

### STEP 4:

Clean with proper cleaning/sanitation products (**Figure 4**).

Reverse steps to reassemble.

**NOTE:** Be sure to activate and rinse a few times to remove extra chemicals and cleaning agents.



(Figure 4)



Hauppauge, New York 11788

**For Further Assistance  
Contact Customer Service at:**

**800-645-3166**

or

**[customer@advancetabco.com](mailto:customer@advancetabco.com)**

©ADVANCE TABCO SEPTEMBER 2021