

THIS CARTON CONTAINS:

- Sink Unit
- Leg Assembly

TOOLS NEEDED (Not Included): 5/32" Allen Wrench

• Drains (1 For Each Sink Bowl)

Step 1

Carefully remove contents of carton/crate. Carefully position sink upside down on a protected surface so you can access the underside of the sink. Install leg assembly into gussets at each end (Figure 1).



Step 2

Tighten each Set Screw using 5/32" Allen Wrench (Figure 2).



Step 3


Carefully turn sink over onto its legs. Check for stability and adjust Bullet Feet as necessary (Figure 3).





Drain Installation Details

Step 4

Install drain(s) & faucet. Your knowledgeable plumbing contractor is responsible for local code requirements. You can also visit our website at **advancetabco.com/support** for drain & faucet details.

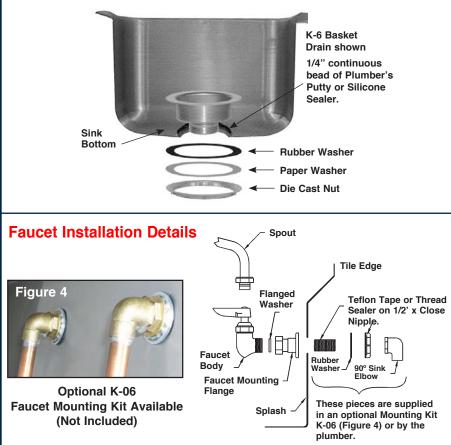



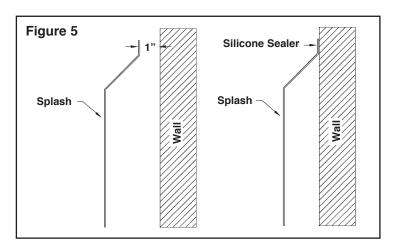

For Additional Assistance,

Please call Customer Service at: 1-800-645-3166



EDGEWOOD, NY 11717-8380

 $\ensuremath{\textcircled{}}$ Advance TABCO, March 2016