



## **Installation Instructions for PFS Series Portable Food Shields**



Shown with Optional Side Panels



**FEATURING ADVANCE TABCO'S  
REVOLUTIONARY CHAMBER LOCK™  
ROTATION SYSTEM**

**Makes Rotating Food Shields Easier Than Ever  
Patent Pending**

**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

## Portable Food Shield (Side Panels Optional)

### Contents:

- (1) Thermoplastic Sneeze Guard
- (2) Black Support Base Frame
- (2) Stainless Steel Posts
- (2) Brass Expanders

### Tools Required:

- 3/16" Allen Wrench (Not Included)


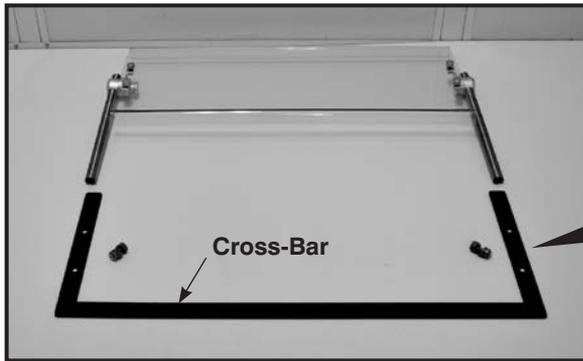


Figure 1

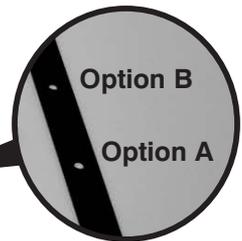

Position the Base Frame flat on the box or a clean smooth soft surface to protect the finish during assembly (**Figure 1**).

**Option A:** For applications where food wells exist, crossbar can be located directly in front of food well.

**Option B:** For all other applications.

### Step 1:

Attach brass expander to frame base by inserting tapered head into beveled hole (bottom side) of frame base. Thread screw into brass expander (**Figure 2**).

**DO NOT TIGHTEN!**

Repeat for opposing side.

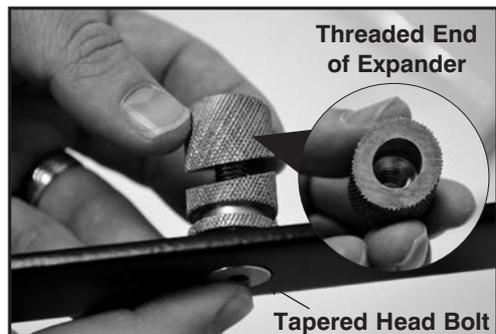


Figure 2

**Step 2:**

Align posts and slide down onto Brass Expanders (Figure 3).



Figure 3

**Step 3:**

Carefully lay down the unit so the Base Frame is facing upright, exposing the Bolts Heads. Use a 3/16" Allen Wrench to tighten Tapered Head Bolts. (Figure 4). Ensure post is tight against frame base when tightening.



Figure 4

**Step 4:**

Position portable food shield in upright position and hold the front glass in one hand and the Sleek Shield™ bracket in the other, pull out the Chamber Lock™ mechanism and rotate glass to desired angle. (Figure 5)

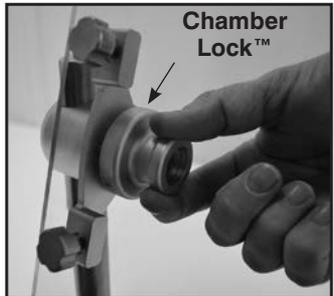


Figure 5

Figure 5a



## Portable Food Shield With Side Panels (PFS-SP Series)

### Step 1:

Remove the two (2) knobs on the posts (**Figure 1**).



Figure 1

### Step 2:

Remove protective film from side panels and align side shield with studs on posts (**Figure 2**).

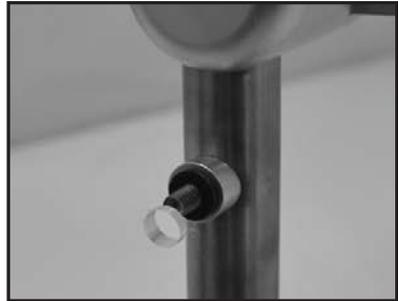


Figure 2

### Step 3:

Reattach the knobs and tighten onto the studs (**Figure 3**).

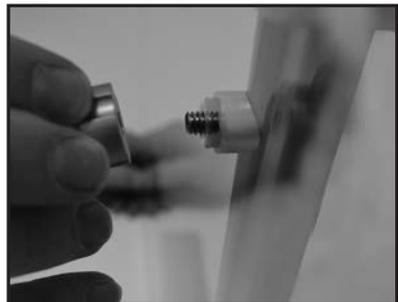


Figure 3



Edgewood, New York 11717-8380

© ADVANCE TABCO MAY 2017