#### Step 5:

Firmly insert Casters into caster sockets found in corners of bottom shelf. Pound firmly with rubber mallet. (Illustration 5)





PUT-5/99



# Installation Instructions for Plastic Utility Cart



### CHECK FOR CONCEALED DAMAGE FILE CLAIM WITH DELIVERING FREIGHT CARRIER

ADVANCE TABCO Plastic Utility Cart is recommended for practical applications. ADVANCE TABCO does not recommend product use for activities employing harsh and active chemicals. Please consult factory regarding unusual applications.

## Installation Requirements

#### Contents:

(1) Top Shelf (w/ handle)

Tools Required: Rubber Mallet

- (1) Middle Shelf (w/ 8 leg gussets)(1) Bottom shelf (w/ caster inserts)
- (8) 12 1/2" Legs
- (2) 4" Swivel Casters with Brakes
- (2) 4" Swivel Casters


#### Step 1:

Place Top Shelf on firm surface, upside down. Insert legs onto leg gussets. Pound firmly with rubber mallet. (Illustration 1)



#### Step 2:

With Middle Shelf upside down, insert shelf onto legs. Use rubber mallet to firmly seat legs into shelf. (Illustration 2)

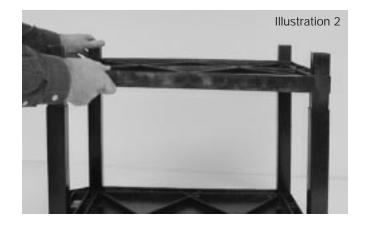

#### Step 3:

Place remaining Legs onto gussets. Pound firmly with rubber mallet. (Illustration 3)



#### Step 4:

With Bottom Shelf upside down, insert shelf onto legs. Use rubber mallet to firmly seat legs into shelf. (Illustration 4)

