



Installation Instructions for **UNDERBAR LEG ASSEMBLY**



STEP 1:

Insert each individual leg into the 4 gussets as shown in **Figure 1**.



Figure 1

STEP 2:

Tighten each leg with 5/32" hex key as shown in **Figure 2**.



Figure 2

STEP 3:

Assemble the 2 Side cross-braces by inserting a leg clamp onto each end of the 2 small Tubes as shown **Figure 3**.



Figure 3

STEP 4:

Tighten the hex screws that only holds the tubes with the 5/32" hex key at this time as shown in **Figure 4**.

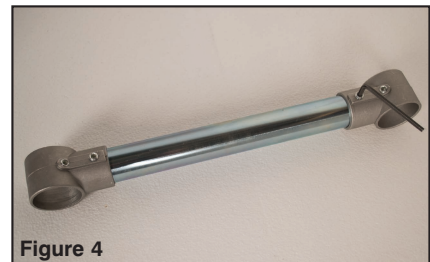


Figure 4

STEP 5:

Evenly slide assembled cross-brace over each set of side legs to the approximate center as shown in **Figure 5**.

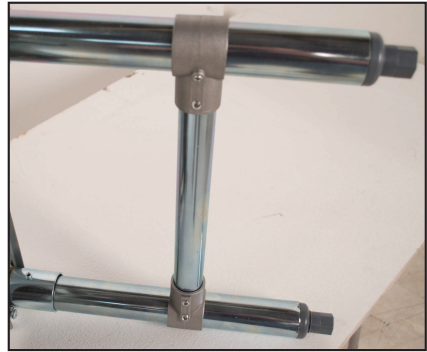


Figure 5

STEP 6:

Tighten all hex screws that secure clamps to the legs with 5/32" hex key as shown in **Figure 6**.



Figure 6

STEP 7:

Stand unit upright on its legs and adjust the bullet feet as needed using an adjustable wrench as shown in **Figure 6**.



Figure 6



Edgewood, New York 11717-8380

www.advancetabco.com

800-645-3166