




# Installation Instructions For **TA-255/256 LEG CASTERS**

“Expander” Style Connection



For Tubular Style Legs

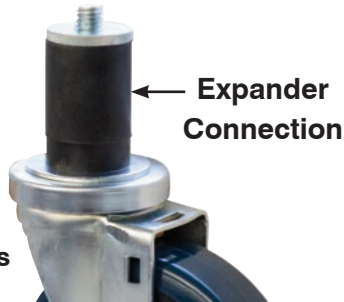

**CHECK FOR CONCEALED DAMAGE  
FILE CLAIM WITH DELIVERING FREIGHT CARRIER**

ADVANCE TABCO® casters are designed to handle certain weight loads. Do not go above maximum caster load ratings. Please consult factory or [advancetabco.com](http://advancetabco.com) regarding load capacities.

# INSTALLATION INSTRUCTIONS

## Tools Required:

19 mm (Metric) Or 3/4" (US) Wrench

### Step 1:

Turn Table upside down or on its side to make it easier to replace caster(s).

### Step 2:

You will want to insert the caster into the table leg (**Figure 1**) with a snug fit, but be able to slide it all the way into the table leg.

Casters usually ship loose fitting, so you will need to adjust the expander of the caster to create a snug fit in step 3. (**Figure 2**).

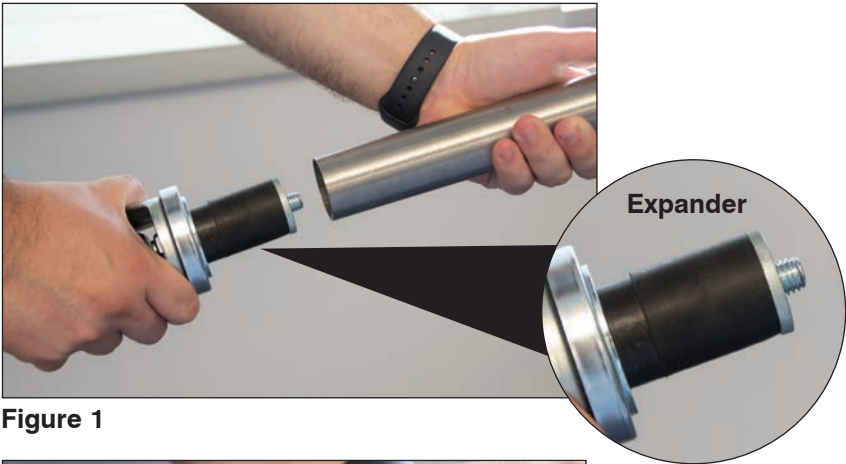


Figure 1



Figure 2

**Step 3:**

Adjust the expander to fit snug in the leg. To adjust, hold the caster by the expander, while using a wrench to expand (clockwise) or contract (counter-clockwise) by turning the nut that is located under the wheel (**Figure 3**).



**Figure 3**

Make small adjustments & keep checking the fit into the table leg. Create a snug fit, twisting if necessary, allowing the expander to go all the way in (**Figure 2**).

**Step 4:**

Once caster is snug inside the leg tube, tighten the nut until it is tight and the caster can not be pulled out (**Figure 4**).



**Figure 4**

# For Further Assistance Contact Customer Service:



**Call: 800-645-3166**



**Email: [customer@advancetabco.com](mailto:customer@advancetabco.com)**



**Live Chat: [advancetabco.com](https://advancetabco.com)**



Hauppauge, New York 11788

NOVEMBER 2022